

AIR TASER™
INTELLIGENT SELF-DEFENSE
OWNER'S MANUAL



READ THIS BOOK FIRST!
Do Not Attempt to Use the AIR TASER™ Until
You Have Read This Book, Watched the
Training Video, and Taken the Test at the End of This Booklet.


BE CAREFUL!

READ THIS BEFORE USING

- NEVER POINT THE AIR TASER™ AT ANOTHER PERSON UNLESS IN SELF-DEFENSE. THE AIR TASER™ PERFORMS BEST FROM 7-10 FT.
- NEVER AIM THE AIR TASER™ AT THE EYES OR FACE.
- KEEP THE AIR TASER™ OUT OF THE REACH OF CHILDREN.
- ALWAYS REPLACE LOW BATTERIES.
- DO NOT GIVE THE AIR TASER™ AWAY AS A GIFT OR SELL WITHOUT FILLING IN REGISTRATION CARD OR TRANSFER CARD.
- SET THE UNIT DOWN GENTLY; AVOID DROPPING UNIT.
- ONLY SET DOWN THE AIR TASER™ TO RUN IF THE ASSAILANT IS ON THE GROUND BEING TASERED; OTHERWISE KEEP THE UNIT IN HAND TO USE AS A STUN GUN IF NECESSARY.
- KEEP HANDS AWAY FROM THE FRONT OF THE UNIT AT ALL TIMES UNLESS THE SAFETY SLIDE IS FORWARD AND THE AIR TASER™ IS DEACTIVATED.
- ALWAYS HOLD THE AIR TASER™ WITH THE LINE OF SIGHT INDICATOR LEVEL; NEVER TILT THE AIR TASER™ WHEN FIRING.
- IF GOING ON AN AIRPLANE, YOU MUST PUT THE AIR TASER™ IN YOUR CHECKED LUGGAGE, IT CANNOT BE CARRIED ON BOARD.
- ALWAYS REPLACE AIR CARTRIDGES BY THE EXPIRATION DATE PRINTED ON EACH AIR CARTRIDGE.
- DO NOT FIRE THE AIR TASER™ NEAR FLAMMABLE LIQUIDS AND FUMES. THE AIR TASER™ CAN IGNITE GASOLINE OR OTHER FLAMMABLES. SOME SELF-DEFENSE SPRAYS ARE FLAMMABLE AND WOULD BE EXTREMELY DANGEROUS TO USE IN CONJUNCTION WITH AIR TASER™.
- THE AIR TASER™ CAUSES TEMPORARY PARALYSIS. THIS PARALYSIS CAN BE DANGEROUS AND EVEN FATAL UNDER SPECIFIC CIRCUMSTANCES. FOR EXAMPLE, SOMEONE TASERED IN A SWIMMING POOL WOULD PROBABLY DROWN AS THEY COULD NOT SWIM OR SUPPORT THEMSELVES. DUE TO POTENTIAL DANGERS, ONLY USE THE AIR TASER™ WHEN ABSOLUTELY NECESSARY TO PROTECT YOUR LIFE.

WHAT IS THE AIR TASER™?

You have purchased the most technologically advanced self-defense system in the world -- the AIR TASER™ Standoff Electronic Incapacitation Device which allows you to keep an attacker up to 15 feet away from you. The AIR TASER™ is a small handheld personal protection device that utilizes compressed air to shoot two small probes up to 15 feet. These probes are connected by special TASER® wire back to the handheld Power Handle. An electric signal is automatically transmitted along the wires to the body of the assailant (even through clothing).

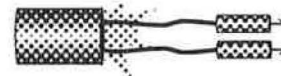

The AIR TASER™ is effective because it overrides the nervous system of the human body. As illustrated schematically below, the AIR TASER™ sends a series of electrical signals called TASER® Waves or T-Waves™ quite similar to those used by the brain to communicate with the body. Much like radio jamming, the T-Waves™ overpower the normal electrical signals within the body's nerve fibers. The human target instantly loses control of his body and cannot perform coordinated action, falling to the ground.




NERVE SIGNAL
or "Brain Wave"



AIR TASER SIGNAL
or "T-Wave"

AIR TASER'S FEATURES

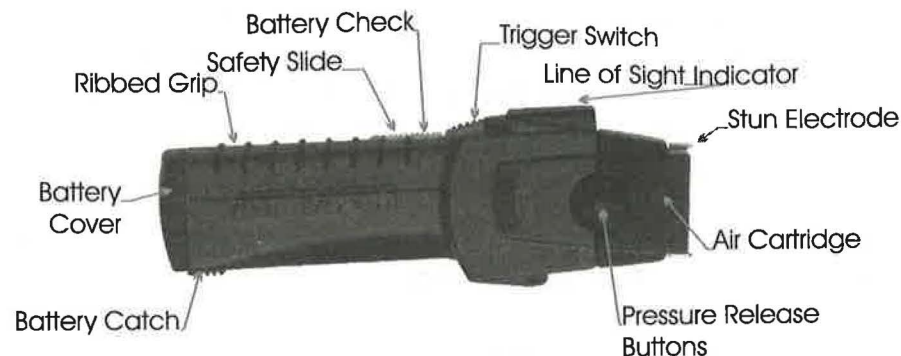



• **Battery Check System:** When the Safety Slide is moved back to the armed position, the AIR TASER's™ Intelligent Electronics System automatically checks the battery to ensure it is fully charged (Be careful not to touch the trigger with the safety back as the unit is armed). If the battery is charged, you will see a red flash or "heartbeat" through the Safety Slide indicating that the battery is good and that the unit is "alive" and ready to fire. If the heartbeat light does not show, it may still have enough energy to fire if you are in an emergency, but **you should replace the battery as soon as possible**. If the "heartbeat" light flashes once or twice, then stops, the battery is running low and should be replaced.

• **Automatic Timing:** When the AIR TASER™ is fired, its Intelligent Electronics System fires the T-Waves™ for 30 seconds (with a few pauses which allows the attacker to take a breath). This allows you to leave the unit behind while it disables the attacker and you get away to safety.

HOW TO PREPARE THE UNIT: INSERTING THE BATTERY

The AIR TASER™ runs off a standard 9-volt alkaline battery. (An Energizer® brand battery is strongly suggested as it has the best power output). To insert the battery, simply push down the battery catch and pull back on the battery cap to expose the empty battery compartment. The 9-volt battery is then inserted with the metal contacts going first into the AIR TASER™. The battery will only fit one way. The larger of the two battery contacts always goes towards the bottom of the power handle. If you cannot close the battery compartment, the battery is probably not in correctly -- so pull it out and flip it over. **Do not try to force the battery in the wrong way as this will damage the unit.**

Once the battery is in place, you can test to make sure it is in correctly by activating the battery checker. **WARNING: AS SOON AS THE SAFETY SLIDE IS MOVED BACK, THE UNIT IS LIVE, SO BE CAREFUL. DO NOT PUSH THE TRIGGER SWITCH UNTIL YOU HAVE READ FURTHER.** To activate the battery checker (make sure it is pointing in a safe direction -- away from people), simply pull back the Safety

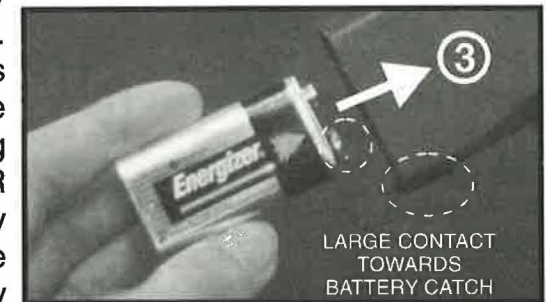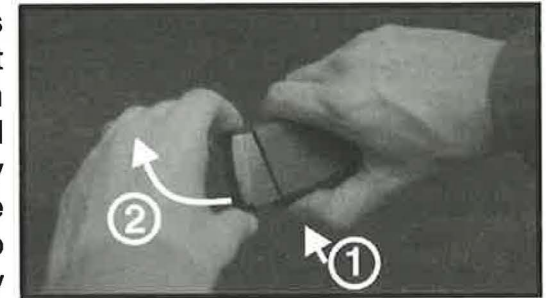


3. Insert Battery With Large Contact (-) On the Bottom (Towards the Catch)
4. Put Battery Cap Back on.

Slide. If the battery is in place correctly, you will see a flashing red heartbeat light through the clear Safety Slide. Once you are through with the battery check, push the Safety Slide back to the forward, safe position -- otherwise, the unit may be fired accidentally if the Trigger Switch is pushed.

HOW TO HOLD THE AIR TASER™

1. Always keep your fingers away from the front of the unit unless the Safety Slide is in the forward, locked position and the flashing heartbeat light is out. **Never put your fingers on the shaded area shown in the illustration or try to remove an AIR CARTRIDGE unless the Safety Slide is in the locked position.** This area will emit T-Waves™ whenever the unit is firing, so do not touch this area or you could get stunned.

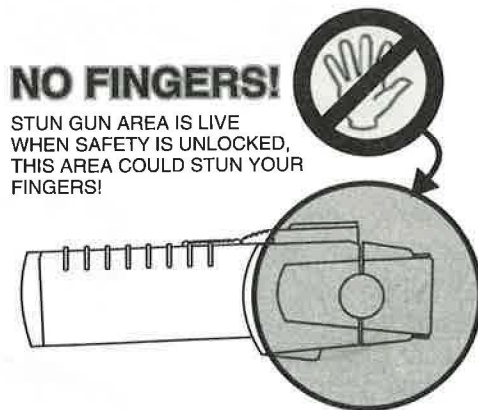

ALWAYS HAVE THE SAFETY SLIDE IN THE FORWARD, LOCKED POSITION BEFORE REMOVING AIR CARTRIDGES OR TOUCHING A LOADED AIR CARTRIDGE.

2. Now, test fire the unit **WITHOUT** the AIR CARTRIDGE in place. Make sure the unit is unloaded as shown next page.

- 1. UNLOADED:**
Can Demonstrate as Stun Gun.



- 2. LOADED:**
Be Careful, a touch of the Trigger will Fire the Probes From the Air Cartridge.




If the unit is not loaded with an AIR CARTRIDGE, it will function as a "Stun Gun."

To demonstrate the Stun Gun feature:

A. Hold the unit with fingers away from the front area.


B. Slide back the Safety Slide Before you press the Trigger Switch, remember that the unit will fire for 30 seconds automatically unless you slide the Safety Slide forward to turn it off. Do not be alarmed by the loud sound the TASER® WAVES make; do not get startled and drop the unit in your lap! You will notice that there are several

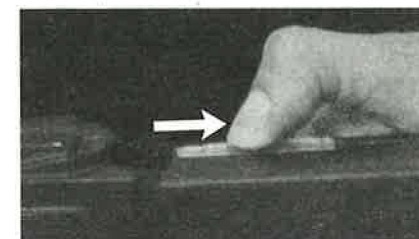


Slide Back the Safety Slide To Arm Unit and Check Battery

pauses during the 30-second firing cycle. Do not forget that the unit is still live even during the pauses and will come back on by itself for the complete 30 seconds unless you lock the Safety Slide forward to turn it off.

C. Press the Trigger Switch. **Press the Trigger Switch To Fire the Unit.**

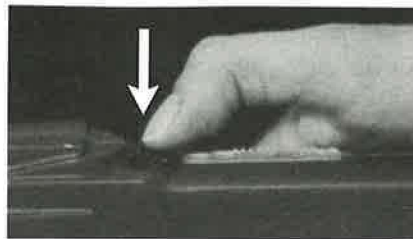

D. Push the Safety Slide forward to turn the AIR TASER™ off. Once the unit has fired for a second or two, we suggest that you slide the Safety Slide forward to the off position. Do not allow the unit to go through the entire timing cycle as this will quickly deplete the battery.

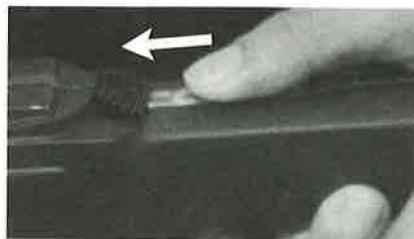


Push Forward Safety Slide To Turn the System Off.

LOADING THE AIR CARTRIDGES

REMEMBER, AS SOON AS THE AIR TASER™ IS LOADED WITH AN AIR CARTRIDGE, IT WILL FIRE THE PROBES AT THE TOUCH OF THE TRIGGER SWITCH (IF THE SAFETY SLIDE IS OFF) -- SO TREAT IT VERY CAREFULLY. DO NOT POINT AT PEOPLE UNLESS IN SELF-DEFENSE.

The AIR CARTRIDGES are very easy to load and unload. To load, simply take an AIR CARTRIDGE and snap it into the front of the unit.

LOADING AN AIR CARTRIDGE

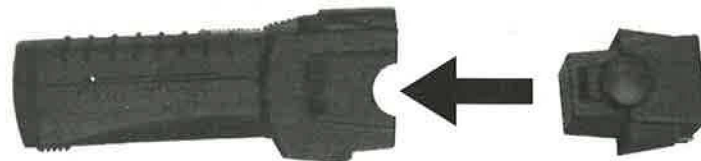


The AIR CARTRIDGE has been specifically designed so that there is no "up" or "down" position - enabling you to quickly reload it in a stressful situation without worrying about putting it in upside down.


Hold the AIR TASER™ evenly, so that the top surface is level and parallel to the ground. Do not tilt the unit as this could cause the bottom probe to miss the target. The bottom probe is aimed slightly downward, and if you turn the AIR TASER™ at an angle, the bottom probe will not fire downward but will fire off to the side resulting in a miss.

DO NOT TILT

 (Front View)

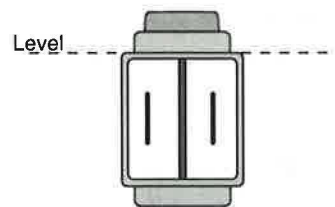

CORRECT

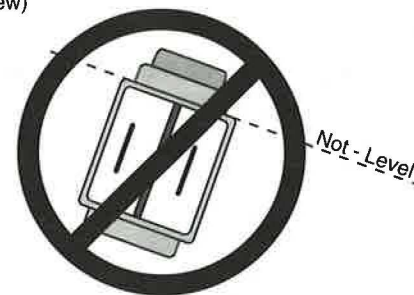

WRONG

To unload the AIR CARTRIDGE, first make sure the Safety Slide is in the forward, locked position. If you touch the

AIR CARTRIDGE while the unit is firing, you will be stunned by the stun gun on the front. Once you have pushed the Safety Slide forward, simply squeeze on the two round release buttons on the side of the AIR CARTRIDGE and pull it out. You can now reload with another AIR CARTRIDGE. It's that simple. The probes, the compressed air, and the TASER® wire are all contained in the AIR CARTRIDGE -- all you have to change is the AIR CARTRIDGE to be ready to shoot again! NEVER ATTEMPT TO OPEN AN AIR TASER™ CARTRIDGE PRIOR TO FIRING -- THEY ARE DESIGNED TO BE FIRED BY THE POWER HANDLE ONLY AND TAMPERING WITH A LIVE AIR CARTRIDGE COULD CAUSE IT TO FIRE.

PRACTICE FIRING

1. Set up the target in a location where there are no hard objects. Much like a BB gun, the AIR TASER™ probes will bounce off of a hard surface such as a metal door. The probes are designed to stick into soft materials such as the clothing of an assailant.

A good place to set up for an AIR TASER™ practice firing is in a wide clothes closet. First, open the doors and remove any hard objects from inside the closet.



Hang Blanket Over
Closet Clothes Bar



Place Target on Center
Of Blanket


Next, hang a blanket over the clothing and over the wooden bar inside the closet. This will prevent the probes from getting stuck into your clothing.

Place the target on top of the center of the blanket, away from the edges of the closet. You can hang the target with either tape or stick pins. The target now simulates a human being wearing clothing.

2. Learn to judge 15 feet. It is much farther than most of us imagine. Get a tape measure and measure out 15 feet from the target. In most rooms, you will not be able to get that far away since 15 feet is about the length of a full size Cadillac. This is more than enough distance to keep an attacker well away from you. However, know your limits and never fire the AIR TASER™ at a target more than 15 feet away. The optimum range for the AIR TASER™ is 7 - 10 feet. If possible, try to fire the AIR TASER™ when your target is between 7 and 10 feet away for best results.

For practicing, 7 feet is the best distance. 7 feet is about the average distance from which police fire their guns. From the target, take 2-3 large paces back. In a real confrontation, you should always try to fire the AIR TASER™ from at least 3 feet away from the target. While it will work from 0-15 feet, it is better to give the probes a little room to spread apart as they come out. So, always try to fire while the attacker is still at least 3 feet away.

3. Always hold the AIR TASER™ level when firing. NEVER TILT THE UNIT SIDEWAYS. The red Line of Sight Indicator should be on top. The AIR TASER™ fires out 2 probes. The first probe will go where you are aiming (center of the chest). The second probe is aimed slightly down so that the probes spread apart and can inject T-Waves into a greater area of the target, making it more effective. If you tilt the AIR TASER™, it will mis-direct the bottom dart.

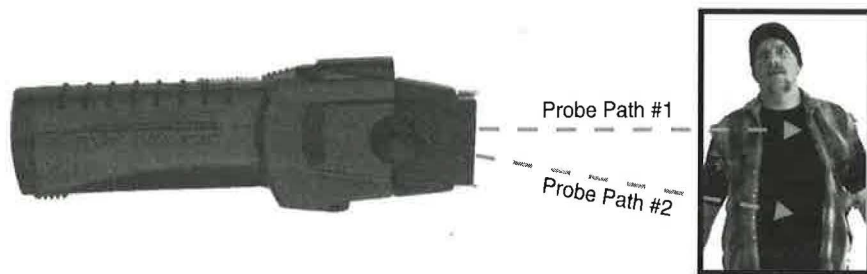

4. How to Aim: The most important part of aiming the AIR TASER™ is to hold it comfortably out in front of you. Hold the AIR TASER™ with the top line level to the ground with your elbow slightly bent at about mid-chest level. Do not hold the AIR TASER™ straight out from the shoulder as this will cause a tendency to aim too high.



CORRECT: Level Aiming Line, Comfortable Position



WRONG: Aiming Line is too High Position Unnatural, Leads to Bad Aim.

Aim the AIR TASER™ as if pointing a flashlight. The red arrow or Line of Sight Indicator on the top of the unit is intended to emphasize where you are pointing -- do not concentrate on the arrow or try to use it like a gun sight. It is merely to help you visualize where the AIR TASER™ is pointed. Just aim the AIR TASER™ right at the center of the chest of the attacker (when you practice, aim at the center of the target). Remember, the top dart will go where you are

pointing, and the bottom dart will hit several inches below the top dart. When practicing, have someone stand off to the side as you aim the AIR TASER™. They will be able to see if you are aiming correctly and can help you learn to aim better. The top line of the AIR TASER™ is level to the line of fire. Use the top line of the AIR TASER™ to determine how high you are aiming.



5. Fire. Pull back the Safety Slide (notice the flashing red light indicating the unit is armed). Next, aim at the center of the target and gently press the Trigger Switch down. There will be a popping sound, but there is no "recoil" (you will not feel any kick from the AIR TASER™ as it fires). Notice the T-Waves™ on the surface of the practice target. The T-Waves™ will not be visible in a real confrontation because they are absorbed by the body of the target. **This is when you would normally put the unit down and leave the area if in a real confrontation.** When you are ready, slide the Safety Slide forward before removing the AIR CARTRIDGE. **AGAIN, ALWAYS KEEP YOUR FINGERS AWAY FROM THE FRONT OF THE AIR TASER™ UNLESS THE SAFETY SLIDE IS IN THE FORWARD LOCKED POSITION. NEVER ATTEMPT TO REMOVE THE YELLOW BLOW OFF DOORS ON THE AIR CARTRIDGE.**


For replacement AIR CARTRIDGES, see your AIR TASER™ dealer. If you cannot locate a dealer near you, please call (800) 418-0283 or (800) 97-TASER for ordering information. Accessories are available for your convenience in carrying or storing the AIR TASER™. For details, see your dealer.

1. Arm the device by sliding back the Safety Slide.

Whenever you are in a potentially dangerous situation, such as walking to your car in a dark parking lot, you should pull back the Safety Slide to arm the unit. This also activates the battery check system so you can see that the battery is good. (Remember, if the heartbeat light does not come on, the unit is still armed, but you need to replace the battery as soon as possible as it has fallen below the recommended level). Once the Safety Slide has been pulled back, the unit is ready to fire, so be very careful not to push the Trigger Switch down unless you mean to fire it.

2. Aim for the center of the chest of the attacker.

Just like pointing a flashlight, aim directly at the center of the chest of an attacker. This is the easiest and most effective place to hit. Do not let the attacker get close. If the attacker gets within 10 feet and you feel physically threatened, then fire!

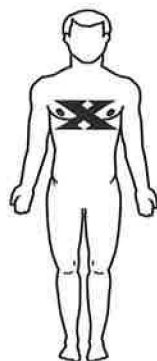

3. Fire. Simply press down the Trigger Switch to fire the probes.


4. If the attacker is on the ground and there are no other attackers, place the AIR TASER™ on the ground and leave the area as quickly as possible (don't just drop

it as this could cause injury to the unit). The AIR TASER™ will continue to stun the attacker for a full 30 seconds (it will then take him anywhere from 1 to 30 minutes to fully recover). We recommend you leave the area and let the unit do its work. Do not attempt to retrieve the AIR TASER™, AIR TASER, Inc. will replace the unit for free upon receipt of a police report! (*See lifetime warranty for details.)

5. If the attacker is not down or there are multiple attackers (or you are attacked from behind), hold the unit firmly and prepare to use it as a stun gun.

If for some reason the attacker is not down (perhaps the probes missed), you may need to use the stun gun feature to defend yourself. Even with the Air Cartridge in place, the AIR TASER will continue to function as a stun gun.

To use the stun gun, press down the Trigger Switch (make sure the Safety Slide has been pulled back) to ensure the unit is active, then press the front of the AIR TASER™ firmly against the body of an assailant. It does not matter whether the AIR CARTRIDGE is in or not. The AIR TASER™ works as a stun gun with or without the AIR CARTRIDGE in place. Even with the AIR CARTRIDGE in place, the metal prongs on the front of the AIR TASER™ will deliver T-Waves™ directly to the body of the target. Shown below are the most effective places to use the stun gun. In the video, you are instructed to aim for the upper leg, because it may be the easiest place to reach if you are grabbed from behind.

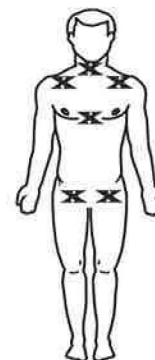

If the attacker is in front of you, you should attempt to press the AIR TASER™ right into the center of his chest, or into the nerves under his chin. Note: If the attacker is touching you, the T-Waves™ will not transmit to you from the attacker. The T-Waves™ directly travel between the two probes.

QUICK REVIEW OF HOW TO USE THE AIR TASER™:

1. **Arm the device by sliding back the Safety Slide.**
2. **Aim for the center of the chest of the attacker.**
3. **Fire -- simply press down the Trigger Switch to fire the probes.**
4. **If the attacker is on the ground and there are no other attackers, set the AIR TASER™ on the ground and run for help. Do not throw it.**
5. **If the attacker is not down or there are multiple attackers (or you are attacked from behind), hold the unit firmly and prepare to use it as a stun gun.**
6. **The AIR TASER™ can be used as a stun gun with the used AIR CARTRIDGE still in the power handle or with the cartridge out of the power handle.**

WHEN TO USE THE AIR TASER™

The AIR TASER™ is a serious, state of the art defensive weapon and should only be used for self-defense in life threatening situations. Although the unit is designed to be as nonviolent as possible in stopping an attacker, its use can result in serious injuries such as getting a probe stuck in an eye, or injuries related to falling.

However, if you are ever assaulted, fire the unit without hesitation. The main advantage of the AIR TASER™ is that it allows you to stop an attacker while he is still up to 15 feet

away. **DO NOT LOSE THIS ADVANTAGE BY WAITING UNTIL THE ATTACKER IS UPON YOU. STAY IN CONTROL.** As soon as you have determined that your life is in danger and the target is within 15 feet, use the AIR TASER™, and get out of the area and seek police aid.

Be sure, however, not to fire at an attacker who is over 15 feet away (measure 15 feet to see how far this is -- it will probably be farther than you think). If you do fire at someone more than 15 feet away, the probes will not have sufficient TASER® wire to reach the target. The AIR TASER™ was designed this way to prevent it from being used for purposes other than self-defense.

WHERE TO KEEP YOUR AIR TASER™

While the AIR TASER™ should be kept somewhere accessible so that you can get to it in an emergency, it must also be kept well away from children. In general, we recommend that you treat the AIR TASER™ exactly as you would a gun -- find a place to store it or keep it so that it is accessible only to you, but not to children or other people unfamiliar with its use. AIR TASER, Inc. offers a series of accessories such as belt type holders and car clips which can help you keep your AIR TASER™ accessible and ready for convenient use.

Temperature Range: Simple rule -- only leave the AIR TASER somewhere you would leave your pet. It is designed for temperatures from 20 degrees to 114 degrees. Much like a pet dog, you should not leave it in the car in Alaska in the winter nor in your trunk in Arizona in the summer. Extreme temperatures can cause damage to batteries. If the temperature is comfortable for you, it is comfortable for the AIR TASER™.

HOW TO MAINTAIN YOUR AIR TASER™

The AIR TASER™ has been designed for ease of maintenance. Aside from storing the AIR TASER in moderate temperatures, you must keep a fresh battery in the unit at all times. Always replace low batteries as indicated by the lack of the red flashing light in the battery check system. Also, replace spent cartridges and always be careful to throw out used AIR CARTRIDGES where the sharp probes will not injury anyone.

Each AIR CARTRIDGE has been printed with an expiration date. This date is intended as a safety guideline after which time the AIR CARTRIDGE should be replaced. At the time of expiration (normally after about 3 years) be sure to fire off the AIR CARTRIDGE before disposing of it. Never throw out a "live" AIR CARTRIDGE, and especially not into a fire as this could cause the AIR CARTRIDGE to explode. **After the expiration date, the cartridge needs to be replaced and a fresh cartridge used.** This procedure helps to maintain the system for top performance. Never attempt to pry the doors off an AIR CARTRIDGE or pry open an AIR TASER™.

AIR TASER™: EFFECTIVE SELF-DEFENSE


The first concern of any self-defense product is that it must be effective. The actual effectiveness in the field of the TASER® matches or surpasses those for handguns with an 86% instant incapacitation rate versus approximately 72% for handguns (based on percentage of targets which are immediately knocked down.¹) Notice also that this sample is biased **AGAINST** the TASER® as the vast majority (86% in one study) of the people who were TASERed were on the drug PCP. Note that people on PCP frequently do not feel

¹ Marshall, E.P. and Sanow, E. J. Handgun Stopping Power, The Definitive Study and Sgt. Greg Meyer, LAPD "Ode to the TASER Gun" The Los Angeles Daily Journal, April 22, 1991

pain and are infamous for their capability to absorb bullets without going down. The TASER® is the Los Angeles Police Department's weapon of choice for those on PCP and the mentally deranged.

The TASER® is so highly effective because the electrical signal penetrates the nervous system regardless of the placement of the probes. The entire human body is covered by the neural net which the AIR TASER™ uses to knock out the target. Because the T-Waves™ can penetrate approximately 2 cumulative inches of clothing, the probes do not have to penetrate the flesh or cause bodily harm to be effective.

Effective Target Areas

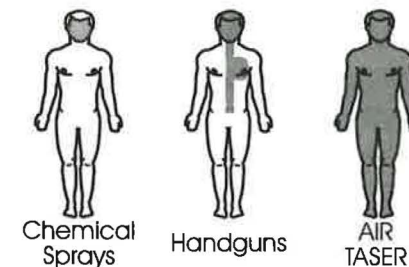

For a bullet to be instantly effective, it must hit a vital organ such as the heart or brain. Similarly, chemical sprays such as Mace or pepper sprays must hit an assailant in the face -- no easy task in fast moving confrontations. The AIR TASER™ can be used more effectively and with less training than other self-defense technologies.


CAUTION: The fact that the AIR TASER™ is highly effective does not make you invincible. There is no substitute for being cautious and aware of your surroundings. There are instances in which you may not have time to use your AIR TASER™, or in which it may not completely incapacitate an assailant for some reason. Use the AIR TASER™ wisely and cautiously, and try to avoid situations where you would need it

at all. Your most effective self-defense is using your head to avoid situations where you need to use the AIR TASER™.

EFFECTIVENESS ON ANIMALS: The nervous systems of animals are greatly different than that of human beings. The AIR TASER™ is designed to be effective on a human attacker. Accordingly, it will not be as effective at incapacitating an animal as it is on a human being. The AIR TASER™ should not be used as sole protection from wild, uncontrollable, or attacking animals.

THE SAFETY RECORD

Because the TASER® Wave “jams” the communication system of the body, it does not need to cause bodily injury to be effective. The AIR TASER's™ output power is about equal to that of a Christmas tree light. It is the nature of the signaling effect within the nervous system that makes it effective. The graph below uses equations developed by the Underwriters' Laboratories, Inc. for safety guidelines for electrical currents. The shaded area is considered safe electrical exposure for 2 year old child or a 75 year old man. Notice that the AIR TASER's™ output is at approximately 1/1,000th of a potentially dangerous level.

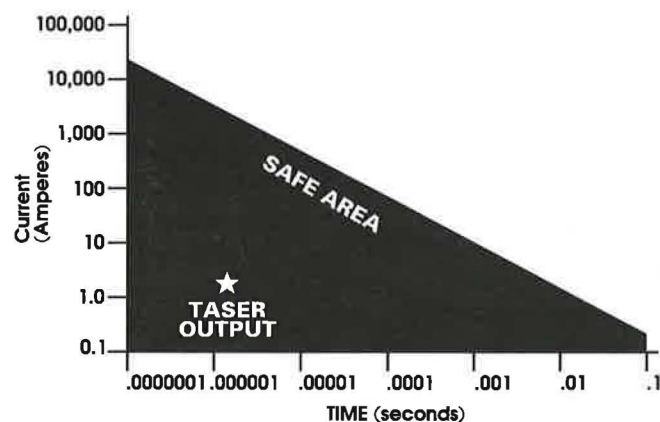

Studies have confirmed that there are no long term effects from being TASERed. A study performed at the University of Southern California Medical Center concluded that in addition to its non-lethality, the TASER® leaves 0% long term injuries. This compares quite favorably to the data in the same study concerning the .38 Special handgun. Only 50% of those shot with a .38 Special survived and of those, 100% had permanent injuries.

Tests have confirmed that the output of the TASER® does not affect the heart. In fact, the output of the TASER® has been applied directly to the heart of a test animal with no harmful effects. Further, the TASER® output will not damage an implanted pacemaker. Modern-day pacemakers are designed to withstand the pulses of electrical defibrillators that are hundreds of times stronger than TASER® pulses.

LEGALITY

The Bureau of Alcohol, Tobacco, and Firearms (BATF) has classified the AIR TASER™ as a non-firearm because it uses compressed air, rather than an explosive to launch the projectiles.

Because the AIR TASER™ is not a firearm:

- It can be carried in a pocket, car or purse legally without a permit. (Again, check state laws)
- It can be purchased through mail order and direct shipment.
- There is no waiting period for a purchase. Rather than checking a person's background to see if they have been caught committing a crime in the past, the AIR TASER™ AFID™ system (see next section) prevents users from committing a crime in the future through complete product traceability. AIR TASERs™ are registered via a simple card used exclusively by AIR TASER, Inc.

The AIR TASER™ is still not available in certain states where electronic weapons are restricted. Those states (Hawaii, Massachusetts, Michigan, New Jersey, New York, Rhode Island, and Wisconsin) are shown shaded below.




There may also exist regulations in certain localities which impede citizens' rights to possess non-lethal self-defense products such as the AIR TASER™. However, the AIR TASER™ is legal for sale and possession in the vast majority of the unshaded areas of the map. Through the innovative AFID™ program the company is working to make the AIR TASER™ available in the shaded states in the future as well.

You should never attempt to take an AIR TASER™ anywhere that weapons are prohibited, such as court rooms, schools, or onto airplanes (you must put the AIR TASER™ in checked luggage).

RESPONSIBILITY AND PREVENTING CRIME

Unfortunately, there will be those who will seek to utilize the AIR TASER™ not for self-defense, but to commit a crime. To prevent this from happening, AIR TASER, Inc. has introduced the Anti-Felon Identification (AFID)™ program. Here's how it works:

1. A Criminal shoots the AIR TASER™ at a victim, launching not only the darts, but spraying the scene of the crime with over 20 pieces of microfilm printed with the serial number (AFIDs) of the Air Cartridge used.

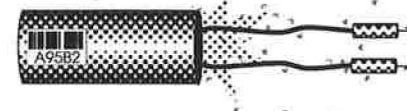

2. The criminal cannot possibly try to find all the AFIDs™, which are harder to find than contact lenses, and flees the crime scene.

3. Police arrive and have time to painstakingly inspect the scene, find the AFIDs™ and return to the lab to read the numbers under a magnifying glass.



4. Police call AIR TASER, Inc. to obtain registration information for the device used. The criminal is promptly tracked down and arrested, using the matching serial number on the Air Cartridge housing as evidence against him (or the serial numbers of other Air Cartridges which were purchased with the one used).

We seek not only to provide a new, highly effective non-lethal self-defense weapon, but a comprehensive solution for lessening the violence problem in this country. And, as a part of that, AIR TASER, Inc. enforces accountability for the way in which people use our products.

IN ORDER TO PROTECT YOURSELF, YOU MUST FILL IN THE ACCOMPANYING REGISTRATION CARD IF YOU GIVE THE UNIT TO ANYONE ELSE. THIS REGISTERS THE UNIT TO THAT PERSON. OTHERWISE, IT WILL REMAIN REGISTERED TO YOU AND YOU WILL

REMAIN RESPONSIBLE (POSSIBLY LIABLE) FOR ITS USE OR MISUSE. IF YOUR UNIT IS STOLEN, USE THIS SAME CARD TO REPORT IT IMMEDIATELY. IF YOU DO NOT HAVE THIS CARD, PLEASE CALL (800) 418-9283 AND OUR CUSTOMER SERVICE REPRESENTATIVES WILL FILE THE REPORT FOR YOU.

No other self-defense weapon in the world -- guns, mace, pepper sprays, stun guns, or batons -- can be traced from evidence at the scene of the crime to a registration of the user. The AIR TASER™ can. It all comes back to responsibility.

SPECIFICATIONS

Effectiveness	Faster acting than chemical sprays or even bullets.
Long Term Effects	None (except for potential eye injuries or injuries related to falling).
Range	15 feet. Optimum Performance: 7 - 10 ft.
Backup if probes miss	If 2 launched probes missed, there are 2 stun electrodes on the front of the unit which can be used as a stun gun.
Automatic Impulse Regulation	Once the probes are launched, unit stays active for 30 seconds to keep target reliably down.
Thickness of Clothing	Up to 2 inches of cumulative clothing, including leather jackets.
Recovery Time	Varies by individual -- generally at least several minutes.
Battery Low Indicator	Yes.
Safety Slide	Prevents accidental firing.
Temperature Range	20 - 114 Degrees Fahrenheit.
FREE Replacement	If lost in self-defense, under Lifetime Warranty. Police Report Required.
Patented Plasma Pulse Generator	Patented technology used to disable the nervous system.
Warranty	90 days, Lifetime available.
Size	8" x 1.5" x 2.5"
Weight	9 ounces (with battery).
Battery	9-volt alkaline.
Patents	U.S. #4,254,132 and 5,078,117.
T-Wave Output	50 KV Peak, 10,000 W Peak per pulse.

AIR TASER™ SELF-TEST

COMPLETE THIS TEST BEFORE FIRING THE AIR TASER™

- The AIR TASER™ should be aimed at: _____
A. The Face B. The Chest C. The Leg D. The Arm
- The red flashing heartbeat light means: _____
A. Time to change the battery
B. The battery is good
C. There is something wrong with the AIR TASER™
- The range of the AIR TASER™ is: _____
A. 15 Feet B. 30 Feet C. Must touch an attacker
- After firing at an attacker: _____
A. Drop the AIR TASER™ immediately
B. After the attacker falls and there are no other attackers, set the AIR TASER™ on the ground and leave the area.
C. If there is a second attacker, or the probes missed the first attacker, hold on to use the AIR TASER™ as a stun gun.
D. Both B and C
- The AIR TASER's™ timing cycle delivers T-Waves™ for: _____
A. 10 seconds B. 15 seconds C. 30 seconds
- Can the AIR TASER™ be used as a \$tun gun with the AIR CARTRIDGE in place: _____
A. Yes B. No
- The AIR TASER™ can be stored in a car. Yes / No
- The AIR TASER™ can be taken on an airplane. Yes / No
- The AIR TASER™ can stop someone on drugs. Yes / No
- The probes need to touch the skin to work. Yes / No
- The 30 second cycle can't be stopped. Yes / No
- The best distance to fire from is 7-10 Feet Yes / No

ANSWERS TO SELF-TEST

1. B
2. B
3. A
4. D
5. C
6. A. It works as a stun gun with or without the AIR CARTRIDGE in place.
7. Yes. But, do not leave it in a car where it will experience extreme temperatures.
8. No. It cannot be carried on board. The AIR TASER must be put in checked luggage like chemical sprays or any other self-defense device.
9. Yes. Field results show that this technology can stop people high on drugs.
10. No. The T-Waves can penetrate up to 2 cumulative inches of clothing, so there is no need for the probes to physically touch the skin.
11. No. To stop the timing cycle, just slide the safety slide forward to the locked position.
12. Yes. The AIR TASER™ performs best from 7-10 feet.

AIR TASER™ LIMITED WARRANTY REGISTRATION

AIR TASER, Inc. warrants this product to be free from defects in material and workmanship and agrees only to repair or replace such product which has been used in accordance with the written and video instructions which accompanied the product at time of purchase. This warranty, without limitation, does not apply to failure of the product due to improper use, abuse, mishandling or accident. It is the responsibility of the purchaser to use this product in accordance with any applicable laws, rules or regulations, local or otherwise.

It is the responsibility of the owner to return the product to the manufacturer via prepaid postage and provide written information as to the nature of the defect. Our only obligation under this limited warranty is to repair or replace the product and return it to the customer, via prepaid postage.

This warranty is in effect for a period not to exceed 90 days from the date of retail purchase and is deemed purchased based on the date of the warranty and AFID registration as provided by the dealer at the time of purchase. Warranty provisions apply to the power handle and any unfired air cartridges. Air cartridges that are fired are deemed to have operated properly. Batteries are covered under manufacturers' warranty.

The expressed warranties herein are provided by the manufacturer and may not be changed or enlarged by any distributor, dealer or other person whomsoever. To register a claim under this warranty, within the warranty period, mail the AIR TASER part to: AIR TASER, Inc., P.O. Box 14463, Scottsdale, Arizona 85267-9913, Attn: Warranty Department. Do not mail the entire kit.

The foregoing provisions are the only warranty and state the exclusive remedy for any breach of warranty or any other claim in respect to this product. THE EXPRESS WARRANTIES CONTAINED HEREIN ARE IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE. IF THE EXCLUSION OF IMPLIED WARRANTIES IS PROHIBITED BY STATE LAW, THEN ANY APPLICABLE IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY DESCRIBED ABOVE.

THE PURCHASER AGREES TO ASSUME ALL LIABILITY FOR ANY DAMAGES AND BODILY INJURY WHICH MAY RESULT FROM THE USE OR MISUSE OF THE PRODUCT BY THE PURCHASER OR ANY OTHER PERSON. CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, ARE SPECIFICALLY EXCLUDED. SUCH CONSEQUENTIAL AND INCIDENTAL DAMAGES SHALL INCLUDE, WITHOUT LIMITING THE FOREGOING, LOSS OF USE, INCOME OR PROFIT, LOSS OF OR INJURY TO PROPERTY OR PERSON.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. No representative of AIR TASER, Inc. or any other person or dealer is authorized to extend the liability of AIR TASER, Inc. in connection with the sale of its product beyond the terms hereof.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

AIR TASER™ LIMITED LIFETIME WARRANTY

AIR TASER, INC. herein warrants this product under its "Lifetime Warranty Program" which covers the original registered owner of the product in the following manner and scope. This warranty is conditional upon the return of the enclosed warranty registration card within 90 days of purchase. Should that card not be returned, this warranty is not applicable. Should the original registered owner use the product in the manner prescribed by the manufacturer via the printed instructions and or the video instructions and the unit rendered inoperable or be stolen by parties unknown, the registered owner shall present a copy of the filed police report as evidence of the product's use in a defensive mode and shall return the inoperative unit to AIR TASER, Inc. (postage prepaid). A replacement power handle will be sent to the consumer via prepaid postage. Prior to forwarding said unit, the registered owner shall obtain a Returned Goods Authorization Number from AIR TASER, Inc. by mail or a toll free telephone number at 1-800-41-T-WAVE [800 418-9283]. With the submission of a copy of the filed police report, sender authorizes AIR TASER to utilize said information in its advertising program unless specific denial of said use accompanies submitted documents. Replacement of units stolen by assailants will only be authorized by AIR TASER with the submission of a filed police report. All terms and conditions with the exception of the 90-day warranty period and those listed under the published AIR TASER LIMITED Warranty registration and accompanied the purchase of the product are in full force and applicable to this extended warranty program.

POLICE REPORT FORM FOR REPLACEMENT AIR TASER™

This form is for use in conjunction with the AIR TASER™ Lifetime Warranty. In the event that you have used the AIR TASER™ to defend yourself, and you left it behind to flee the scene as this manual suggests, follow the directions below to receive a free replacement (Use additional sheets if necessary):

1. Obtain a copy of the police report of the incident. This report is necessary to verify that the AIR TASER™ was lost in the process of self-defense. This police report must include the AFID numbers from the AIR CARTRIDGE used. Without the AFID registration number, we cannot verify your registration.

2. Fill-in the following information (write clearly):

Name

Telephone Number

Driver's License #, State

Address

3. Describe how you used the AIR TASER™ to defend yourself:

4. Sign below acknowledging your request for an AIR TASER™ under the terms of the Lifetime Warranty, and to acknowledge that all representations herein are accurate and true,

Signature

Date

5. Detach this form and return with the police report and your receipt of purchase to :

AIR TASER, Inc.
P.O. Box 14463
Scottsdale, AZ 85267-9913.

NOTES

NOTES

NOTES

NOTES

NOTES



PROUDLY
PRINTED IN THE U.S.A.

AIR TASERTM
INTELLIGENT SELF-DEFENSE

AIR TASER, Incorporated
P.O. Box 14463
Scottsdale, Arizona 85267-9913

1- 800-418-9283

© 1994, AIR TASERTM, Inc.
All Rights Reserved



80-00003-001